

DESCALING

IMPORTANT: As this appliance is fitted with a concealed element, it must be descaled regularly. The frequency of descaling depends on usage and the hardness of the water in your area.

Excessive scale can cause the appliance to switch off before boiling and may damage the element, invalidating the warranty.

It is essential that regular descaling takes place.

Remove hard scale using a proprietary descaling product suitable for stainless steel, glass or plastic.

For stainless steel kettles, please follow the instructions carefully.

Alternatively, use citric acid crystals (available from most pharmacies) as follows:

- 1** Fill the appliance 3/4 full, boil, then unplug the appliance (remove the cordless kettle from the base unit) and stand it in an empty sink or bowl.
- 2** Gradually add 50gm of citric acid crystals to the water, then leave the kettle to stand. Do not use a more concentrated solution.
- 3** As soon as the effervescence subsides, empty the appliance and rinse it thoroughly with cold water.
- 4** Wipe the outside of the appliance thoroughly with a damp cloth to remove all traces of acid which may damage the finish.

IMPORTANT: Ensure that the electrical connections are completely dry before using the appliance.

HINTS AND TIPS

Cleaning and maintenance

WARNING: Always disconnect the plug from the mains and allow the appliance to cool before cleaning.

Wipe the outside with a damp cloth.

IMPORTANT: Do not use abrasive cleaners on the outside of the appliance, as they may scratch the surface.

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call. We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your enquiry quickly:

- Name of the product
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

UK Helpline 0844 871 0954

Replacement Parts 0844 873 0720

Ireland Helpline 1800 409 119

YOUR TWO YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return the product with a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore, it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to these instructions supplied. For example, kettles should have been regularly descaled.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).

- 4 The appliance has been used for hire purposes or non domestic use.
- 5 The appliance is second hand.
- 6 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
- 7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.
- 8 Batteries and damage from leakage are not covered by the guarantee.

- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.
- This guarantee is valid in the UK and Ireland only.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

morphy richards

**The After Sales Division
Morphy Richards Ltd**
Mexborough, South Yorkshire,
England, S64 8AJ

Helplines (office hours)
UK 0844 871 0954
Spare Parts 0844 873 0720
Republic of Ireland 1800 409 119

Morphy Richards products are intended for household use only.

 
Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of it's models at any time.

KT43675 MUK Rev 1 04/08

For details of other products in the Morphy Richards range, please see our website . . .

morphy richards®

**Up to 24% energy saving, with
no compromise on performance ***

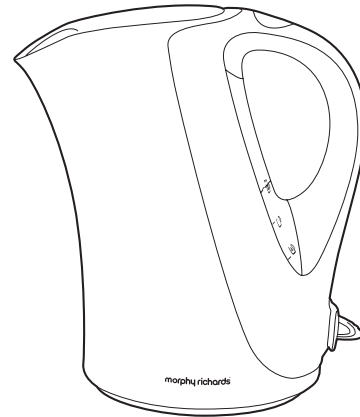

ecoelectric kettle



Please read and keep these instructions

The kettle that not only does a good job...

 
As well as looking incredibly stylish, our ecoelectric kettle is very practical - it has a 1.7litre capacity, cool touch materials, ergonomic design for easy pouring and a really clever eco boil function.

...it helps you do your bit to save the planet

It also makes it easy to save up to 24% less energy on heating water. It's special illuminated water gauge helps you easily see how much water is left (so you're not wasting money boiling more than you need for a cuppa), whilst it's ingenious 'eco switch' saves energy by heating the water to a lower temperature - 85 degrees which is ideal for perfect tasting coffee and herbal teas.

Meet the family

Every product in the ecoelectric family is packaged in materials that are both recycled and 100% recyclable. Naturally, that makes them better for the environment.

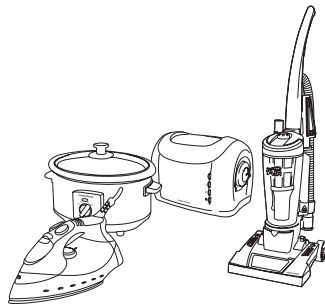

For replacement parts, help with using your Morphy Richards product, problems and lots more, contact us by phone or through our website.

KT43675 MUK Rev 1



UK Helpline: 0844 871 0954
Replacement Parts: 0844 873 0720
Ireland Helpline: 1800 409 119

* all products tested against Morphy Richards
or competitor standard equivalent.

www.morphyrichards.com

GETTING THE BEST FROM YOUR NEW KETTLE

Safety first: Always pour water slowly and carefully to prevent the splashing of scalding water.

Empty the water out of the kettle after first boiling: To clean away any deposits that are left in the kettle after the manufacturing process.

Descalc as appropriate for the hardness of the water in your area: It is important to descale as the performance of the kettle for auto switch-off will be impaired.

Fast boil kettles perform differently: If your kettle is a fast boil model, it may sound louder during boiling, and switch off suddenly with no after noise - this is normal.

IMPORTANT SAFETY INSTRUCTIONS

Location

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or near water.
- **WARNING: Do not place the appliance onto a metal tray or metal surface whilst in use.**

Mains lead

- Do not let the mains lead hang over the edge of the worktop where a child could reach it.

- Do not let the lead run across an open space e.g. between a low socket and a table.
- Do not let the lead run across a cooker or other hot area which might damage the cable.
- The mains lead should reach from the socket to the base unit without straining the connections.

Personal safety

 
- **WARNING: To protect against fire, electric shock and personal injury, do not immerse cord, plug and appliance in water or any other liquid.**
- Always keep the top of the cordless base dry, especially around the connection area, disconnect the power supply before drying. Allow to dry thoroughly before reconnection to the power supply.
- Always pour hot water slowly and carefully without tipping the appliance too fast to prevent splashing and spillage.
- Extreme caution must be used when moving an appliance containing hot liquid.
- Do not touch hot surfaces, use the handles or knobs.
- Always close the lid, if applicable, and always have the filter in place.
- Avoid contact with emitting steam when the water is boiling or just after it has switched off.
- Take care if opening the lid of the appliance when hot.
- Do not open the lid whilst the water is boiling.
- Do not fill above the MAX mark, otherwise boiling water may be ejected.
- Unplug from the outlet before cleaning.
- Allow to cool before putting on or taking off parts and before cleaning.
- Do not hold the switch in the ON position, or tamper with the switch to fix it in the ON position, as this may cause damage to the switch-off mechanism.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Children

- Never allow a child to operate or play with this appliance.
- Children are vulnerable in the kitchen particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.
- Children should be supervised to ensure they do not play with the appliance.

Treating scalds

- Run cold water over the affected area immediately. Do not stop to remove clothing, get medical help quickly.

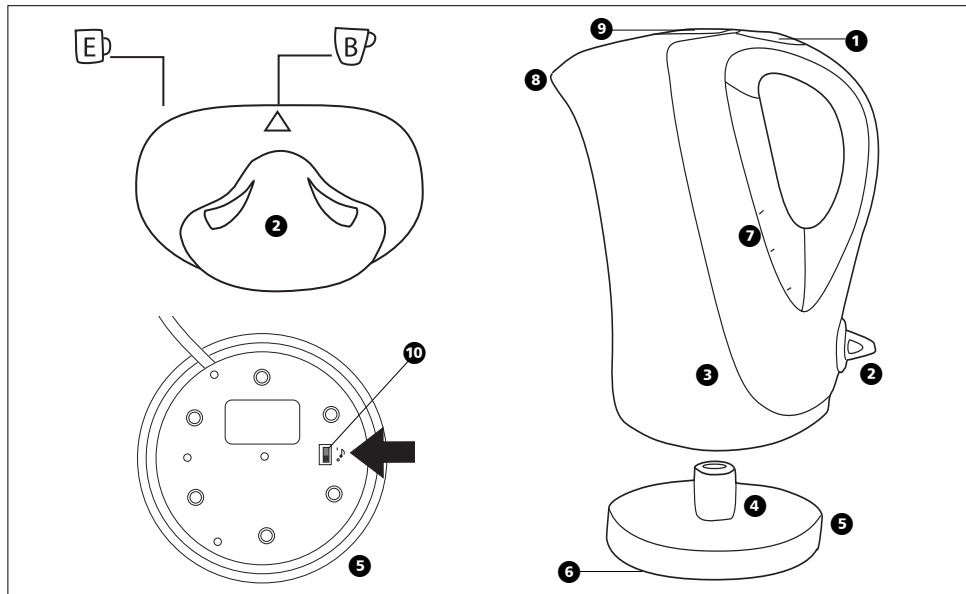

Other safety considerations

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Morphy Richards for advice.
- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.
- Do not attempt to connect any other appliance to the base unit or this appliance to another base unit.
- Do not tamper with the connector in any way.
- Do not use the appliance for any use other than to boil water.
- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- The appliance must not be on the base unit when being filled with water.

- The mains lead of the cordless base cannot be repaired. If the mains lead is damaged, the cordless base should be discarded and replaced, contact the helpline for advice.
- Unplug from the outlet when not in use.

ELECTRICAL REQUIREMENTS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

WARNING: This appliance must be earthed.

FEATURES

- Lid release button
- On/off switch
- Concealed element
- 360° connector
- Cordless base unit
- Cord storage
- Water level indicator
- Spout filter
- Lid
- Whistle on/off switch

BEFORE FIRST USE

 
 
Before using the appliance for the first time, fill with water, boil, and pour away.

OPERATING THE APPLIANCE

- 1 Wherever possible, fill through the spout, as this helps to free the filter ③ from limescale build-up.
 - Your kettle has a viewing window ⑦, so you can easily see the amount of water in the kettle.
 - Ensure that you put the minimum requirement of water in the kettle, 1 cup 25cls.
 - Boil only as much water as you need, as this saves electricity.
- 2 Place the appliance on the base unit ⑤, ensuring the appliance locates onto the 360° connector ④.
 - The 360° connector allows the appliance to be located at any position - ideal for left and right handed users and convenient positioning on a worktop.
- 3 Plug in and switch on at the wall socket.
- 4 Switch the appliance on:
 - **Boil A**
Ensure the on/off switch ② is to the right and press down. The switch will illuminate green. The water gauge will illuminate blue. The appliance will switch off when it is boiled. This setting is ideal for boiling water for making tea or water used for cooking.
 - **Eco setting B**
Ensure the on/off switch is over to the left and press down. The switch will illuminate red. The water level gauge will illuminate blue. The kettle will switch off when the water has reached approximately 85°. Perfect for making coffee and herbal teas.


- 5 Lift the appliance from the base unit by the handle, ensuring you hold the appliance level.

- To re-heat, switch to ON again. If the appliance has just switched off, wait a minute or so before switching it back on again.
- If you do not put in enough water, or switch on the appliance when it is empty, the safety cut-out will switch off the power automatically. If this happens, refill and wait a few minutes for the element ③ to cool, then use as normal.

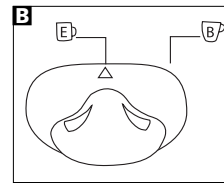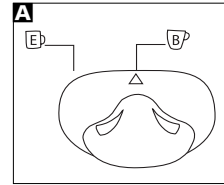


LID RELEASE C

 - To open, press the lid release button ① down and the lid ⑨ will open.

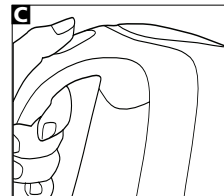

FILTER REMOVAL D

 - 1 Open the lid.
- 2 Remove the lid by lifting it upwards slightly and then away from you off the hooks.
- 3 Replace the lid as removing but in reverse, and close.

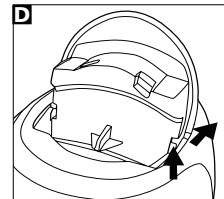

WARNING: Make sure that the lid is put in correctly, otherwise it will not close.

ADDITIONAL FEATURES

Whistle feature E

- There is a switch ⑩ on the cordless base of the product that can switch the whistle on and off as desired.

